

Malolactic Fermentation SIHALACT™ Oeno

Oenococcus Oeni

SIHALACT Oeno malolactic bacteria is a new lactic acid bacterial strain (*oenococcus oeni*) for red, rosé, and white wine processing that was selected from a German wine. As a reactivation culture SIHALACT Oeno malolactic bacteria guarantees fast and safe malolactic fermentation (MF). The high malolactic activity of the lactic acid bacterial strain ensures optimal MF, particularly at low inoculation temperatures.

The specific qualities of SIHALACT Oeno malolactic bacteria:

- Universally applicable for red, rosé, and white wine processing
- Low diacetyl formation
- Inoculation parameter: pH value ≥ 3.2
- Inoculation parameter: temperature $> 63\text{ }^{\circ}\text{F}$ ($17\text{ }^{\circ}\text{C}$)
- Inoculation parameter: free $\text{SO}_2 < 0.7\text{ gr}/100\text{ fl oz}$ (15 mg/l)
- Alcohol tolerance up to 15% by vol.
- No histamine formation
- Particularly suitable for inoculation after alcoholic fermentation (residual sugar concentration $< 16.7\text{ dr}/\text{fl oz}$ (10 g/l) at pH > 3.5)

Application and Dosage


Do not use less than the recommended quantity. A lower dosage would significantly reduce the number of inoculation cells, resulting in much reduced inhibition of spontaneous lactic acid bacteria.

SIHALACT Oeno malolactic bacteria can be reactivated and sprinkled into the wine once the alcoholic fermentation is complete ($< 16.7\text{ dr}/\text{fl oz}$ (10 g/l) residual sugar at pH > 3.5). Intensive contact with oxygen through strong agitation or recirculation should be avoided. This is also the reason why the container should be kept sealed during MF.

Reactivation instructions

For 264 gal (10 hl), sprinkle the contents of the package in 17 fl oz (500 ml) of chlorine-free water at $64 - 75\text{ }^{\circ}\text{F}$ ($18 - 24\text{ }^{\circ}\text{C}$) and stir slightly. Wait for 5 – 15 minutes. The lactic acid bacteria suspension can then be added directly to the tank.

For 660 gal (25 hl), sprinkle the contents of the package in 34 fl oz (1 l) of chlorine-free water at $64 - 75\text{ }^{\circ}\text{F}$ ($18 - 24\text{ }^{\circ}\text{C}$) and stir slightly. As for the 264 gal (10 hl) packs, wait for 5 – 15 minutes before inoculating the tank.

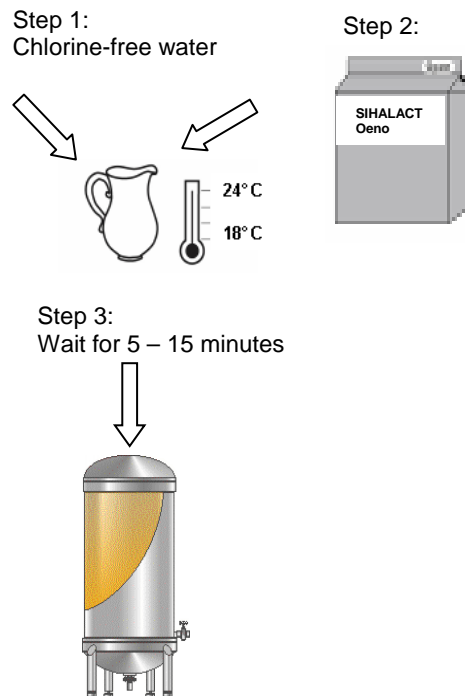

Product Characteristics

SIHALACT Oeno malolactic bacteria contains freeze-dried *oenococcus oeni* cells.

The selection criteria for the development of the product were: targeted MF, high alcohol and SO_2 tolerance, low pH values, and preservation of primary fruit aromas.

Important Notes

After receipt, the package must be stored in a freezer at $-0.4\text{ }^{\circ}\text{F}$ ($-18\text{ }^{\circ}\text{C}$) until it is used. In order to avoid damage through atmospheric oxygen, do not open the package until you intend to use it.

The optimal wine temperature for inoculation is between 64 – 77°F (18 – 25 °C). The wine temperature should not be less than 63 °F (17 °C). The pH value should be > 3.2. At lower pH values deacidification of the must is recommended. The wines to be inoculated should have a maximum alcohol concentration of 15% by vol., in order to achieve optimal MF with SIHALACT Oeno malolactic bacteria.

MF tends to start 2 – 3 days after inoculation with SIHALACT Oeno malolactic bacteria and is completed after 1 to 2 weeks, depending on the wine parameters.

Safety

When used and handled correctly, there are no known unfavorable effects associated with SIHALACT Oeno malolactic bacteria.

Since SIHALACT Oeno malolactic bacteria can be mixed in easily, there are no health risks associated with the application.

Further safety information can be found in the relevant Material Safety Data Sheet, which can be downloaded from our website.

Storage

SIHALACT Oeno malolactic bacteria is delivered in a gastight and watertight laminated film package. The product must be stored at -0.4 °F (-18 °C, freezer). Under these conditions we guarantee full activity for a minimum of 36 months.

At 40 °F (4 °C) the product remains active for a minimum of 18 months.

It is not necessary to adapt the temperature of the wine.

Delivery Information

SIHALACT Oeno malolactic bacteria is available in the following package sizes for

132 gal (5 hl) of wine pack (laminated aluminum foil) - article no. 93.459.903

660 gal (25 hl) of wine pack (laminated aluminum foil) - article no. 93.459.905

2,640 gal (100 hl) of wine pack (laminated aluminum foil) - article no. 93.459.907

HS Customs Tariff: 3002 90 50

Certified Quality

SIHALACT Oeno malolactic bacteria is inspected regularly during the production process to ensure uniformly high product quality.

These inspections include technical function criteria as well as safeness in accordance with relevant laws governing production of foods. Strict controls are carried out immediately prior to and during final packaging.

SIHALACT Oeno malolactic bacteria meets the purity criteria of the International Codex for Wine Processing Agents and complies with the German Wine Law.

North America

44 Apple Street
Tinton Falls, NJ 07724
Toll Free: 800 656-3344
(North America only)
Tel: +1 732 212-4700

Europe/Africa/Middle East

Auf der Heide 2
53947 Nettersheim, Germany
Tel: +49 2486 809-0

Friedensstraße 41
68804 Altlufheim, Germany
Tel: +49 6205 2094-0

An den Nahewiesen 24
55450 Langenlonsheim, Germany
Tel: +49 6704 204-0

China

No. 3, Lane 280,
Linhong Road
Changning District, 200335
Shanghai, P.R. China
Tel: +86 21 5200-0099

Singapore

4 Loyang Lane #04-01/02
Singapore 508914
Tel: +65 6825-1668

Brazil

Av. Julia Gaioli, 474 – Bonsucesso
07251-500 – Guarulhos, Brazil
Tel: +55 11 2465-8822

For more information, please
email us at filtration@eaton.com
or visit www.eaton.com/filtration

EN
1 B 5.2.5
09-2015

© 2015 Eaton. All rights reserved. All trademarks and registered trademarks are the property of their respective owners. All information and recommendations appearing in this brochure concerning the use of products described herein are based on tests believed to be reliable. However, it is the user's responsibility to determine the suitability for his own use of such products. Since the actual use by others is beyond our control, no guarantee, expressed or implied, is made by Eaton as to the effects of such use or the results to be obtained. Eaton assumes no liability arising out of the use by others of such products. Nor is the information herein to be construed as absolutely complete, since additional information may be necessary or desirable when particular or exceptional conditions or circumstances exist or because of applicable laws or government regulations.



Powering Business Worldwide